

WARNING

DEALER / CUSTOMER RESPONSIBILITY

With EZ Loader, your safety is our first concern. Please adhere to the following safety requirements so that your boating and trailering experience is both trouble-free and safe. Failure to comply may result in serious personal injury, death or extreme damage to your boat and trailer.

1. Torque wheel lug nuts to 85-95 ft-lb_f in stages as recommended on page 14 of the EZ Loader Owner's Manual. Lug nuts must be re-torqued after the first 50 miles of use. Check lug nuts before every trip for proper torque.
Loose lug nuts can cause wheel holes to elongate and stud to shear off.
2. Keep tires inflated to the recommended pressure as stated on the tire. Check pressure before each trip.

***EZ LOADER IS NOT RESPONSIBLE FOR
THESE AREAS LISTED ABOVE.***

See other side

3. Hitch ball and trailer coupler must be of the same size, and same rating. Coupler latch must fit securely over the ball, the coupler locking device engaged fully, and safety chains must be attached before towing.
4. Since boat trailer wheels are put in water, it is important to check and lubricate bearings on a regular basis.

***EZ LOADER IS NOT RESPONSIBLE FOR
THESE AREAS LISTED ABOVE.***

See other side

WARNING

DEALER / CUSTOMER RESPONSIBILITY

With EZ Loader, your safety is our first concern. Please adhere to the following safety requirements so that your boating and trailering experience is both trouble-free and safe. Failure to comply may result in serious personal injury, death or extreme damage to your boat and trailer.